

# How to change outlet port adapters to Medikro Calibration Syringes

2022-09-07

Remove the original adapter by pulling it out, starting from one spot.




Squeeze the new adapter in your hand so that the inner circle becomes "smaller" and becomes easier to place into the hole.



Place the adapter into the hole and press firmly.



Make sure that the adapter is pressed properly against the syringe. Straighten the adapter by rotating it.

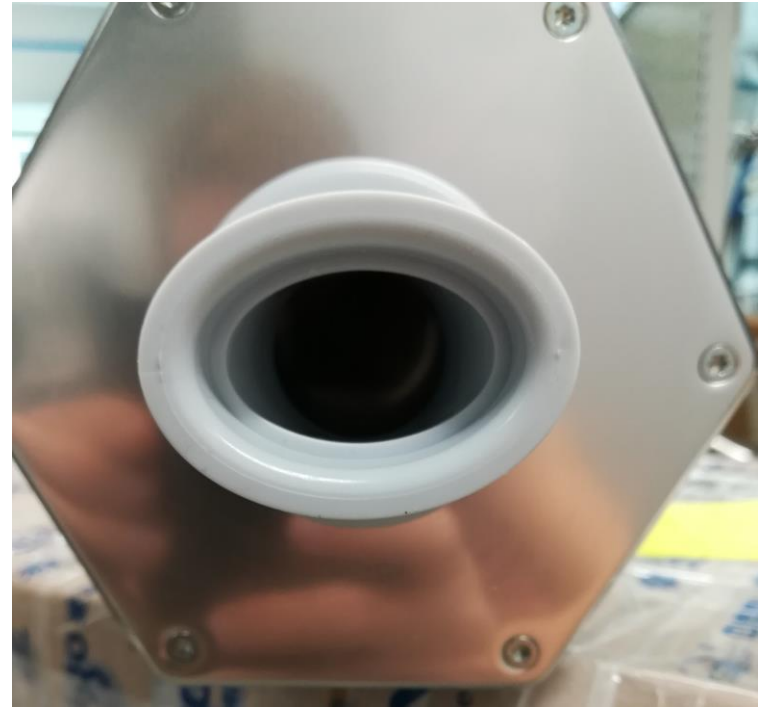

Make sure (inspect visually) that the inner part of the adapter is settled evenly.

