


CERTIFICATE OF CALIBRATION no K008-G05693

Customer	Medikro Oy Pioneerinkatu 3 70800 KUOPIO
Instrument	Humidity and Temperature Probe
Manufacturer	Vaisala Oyj
Model	HMP113
Serial number	M5050269
Instrument number	ME-057
Calibration date	From September 25 to 26, 2023
Calibration due date	September 25, 2024
Issue date	September 26, 2023
Signature	 _____ Jarno Suutari Calibration Engineer
Page 1 (4)	
Documents attached	-
NOTES	The instrument was adjusted during calibration.
Conditions when received	Reported in Service Report.

This Certificate may only be reproduced in full, except with the prior written permission by the issuing Laboratory. The measurements carried out and the Certificates of Calibration issued by an Accredited Calibration Laboratory comply with the measurement ranges and uncertainties approved by FINAS Finnish Accreditation Service. The measurement results issued by the Laboratory are traceable to national or international measurement standards. Measurement Standards Laboratory of Vaisala Oyj is a calibration laboratory K008 accredited by FINAS Finnish Accreditation Service, accreditation requirement ISO/IEC 17025. The accreditation is included in the Multilateral Agreement (EA MLA) of the European co-operation for Accreditation (EA).

DESCRIPTION

The measurement results were obtained from the measured values or the results were calculated from the measured values by using adjustment coefficients.

The instrument's configuration, settings and coefficients were read from the instrument's memory.

Before measurements the instrument was allowed to stabilize to the conditions of the laboratory for at least 1 hour with 9,0 VDC \pm 0,3 VDC power supply on.

The instrument was configured to use pressure 1013,25 hPa settings for the time of the calibration if there is a pressure compensation setting in the instrument.

REFERENCES USED DURING TEMPERATURE CALIBRATION

PTU30T Pressure and Temperature Transmitter, serial number U1910961, due date 2024-Mar-31

REFERENCES USED DURING HUMIDITY CALIBRATION

PTU30T Pressure and Temperature Transmitter, serial number U1910961, due date 2024-Mar-31

Thunder 2500 Humidity generator, serial number 22061299, due date 2023-Sep-30

PTB330 Digital Barometer, serial number N3940423, due date 2024-Jul-31

TRACEABILITY

The measurement results are traceable to the international system of units (SI) through national metrology institutes (NIST in USA or equivalent) or accredited calibration laboratories.

CALIBRATION PROCEDURE

DOC233127 temperature. DOC230528 humidity.

UNCERTAINTY

The reported expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the coverage factor $k = 2$, which for a normal distribution corresponds to a coverage probability of approximately 95 %. The standard uncertainty of measurement has been determined in accordance with EA Publication EA-4/02.

The measurement uncertainty represents the situation at the time and conditions of calibration. When using the UUC at different conditions and at different time the effect of the conditions and stability of the UUC shall be evaluated separately.

The measurement results and uncertainty are representing the measured instrument and measurement points only.

The calibration uncertainty includes known uncertainty components related to the instrument under calibration.

The instrument-dependent calibration uncertainty of the calibration point has not been defined entirely when the calibration uncertainty is marked with the text ** due to a large instrument reading error, due to the possibility of digital or analog output freezing to output a constant reading near the upper or lower limit of the output range or due to equivalent instrument-related reason. In the case of marking **, the calibration uncertainty is given without considering the effect of above-mentioned not exactly known reasons on the calibration results.

STATEMENT OF CONFORMITY

The calibration results and the statement of conformity with specification relate only to the calibrated instrument and the calibration points.

The statement of conformity is based on simple acceptance, whether the calibration result is within or outside the manufacturer's specification. The calibration uncertainty is not taken into account in the statement of conformity.

The probability of accepting a non-conforming result or rejecting a conforming result can be as large as 50 % with this acceptance rule when the calibration result is close to the specification limit.

Pass = The calibration result is equal or within the manufacturer's specification.

Fail = The calibration result is outside the manufacturer's specification.

There is no specified specification when the specification is marked with 'None'.

AMBIENT CONDITIONS

Temperature 23 °C \pm 3 °C

Humidity 35 %rh \pm 32 %rh

TEMPERATURE CALIBRATION

The temperature calibration was done in the Measurement Standards Laboratory (MSL) of Vaisala Oyj on September 25 and 26, 2023.

The temperature readings of the instrument were compared to the values of the reference thermometer from 0,1 °C to 40,0 °C in a climate chamber.

During calibration the instrument was allowed to stabilize to the conditions of the measurement temperature for at least 30 minutes.

Temperature values were read via serial port with resolution of 0,01 °C

Temperature values are given according to the International Temperature Scale of 1990, ITS-90.

Measurement results

The reference and the reading values are averages of at least ten independent observations.

Table 1. As found results, temperature, T

Reference [°C]	Reading T [°C]	Correction [°C]	Uncertainty [°C]	Specification [°C]	Conformity Statement
0,05	0,04	0,01	0,11	0,20	PASS
23,08	23,08	0,00	0,11	0,20	PASS
40,03	39,97	0,06	0,11	0,40	PASS

The correction shall be added algebraically to the reading.

Table 2. As left results, temperature, T

Reference [°C]	Reading T [°C]	Correction [°C]	Uncertainty [°C]	Specification [°C]	Conformity Statement
0,05	0,03	0,02	0,11	0,20	PASS
23,08	23,09	-0,01	0,11	0,20	PASS
40,03	40,00	0,03	0,11	0,40	PASS

The correction shall be added algebraically to the reading.

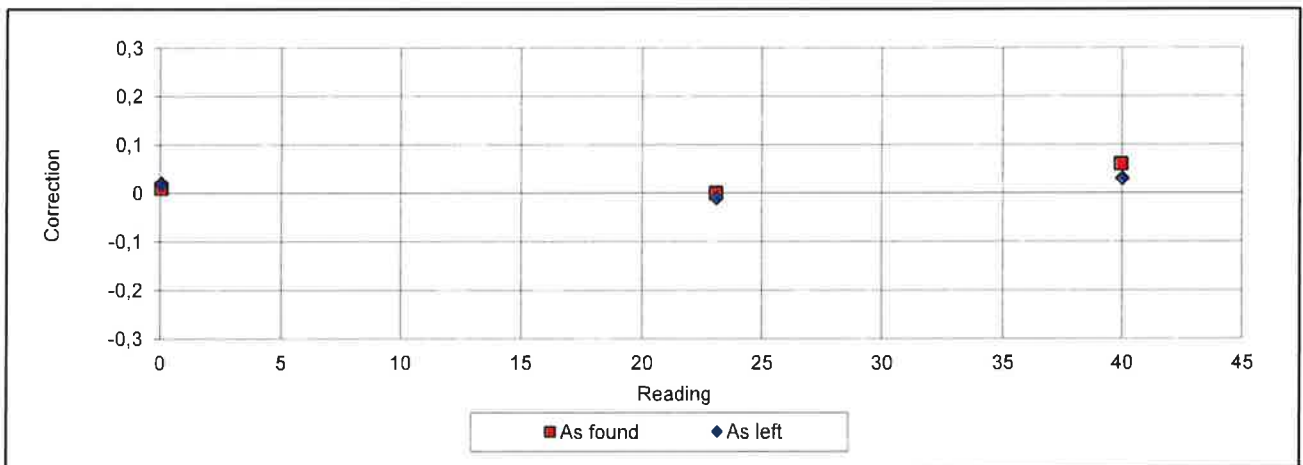


Figure 1. Final results, temperature [°C]

HUMIDITY CALIBRATION

The humidity calibration was done in the Measurement Standards Laboratory (MSL) of Vaisala Oyj on September 25 and 26, 2023.

The humidity readings of the instrument were compared to the reference humidity values at climate chamber in the range from 14,9 %rh to 95,2 %rh. The humidity readings were read via serial port with resolution of 0,01 %rh.

The chemical purge was run before each humidity calibration point if the instrument has the chemical purge option.

Measurement results

The instrument probe was allowed to stabilize to each humidity for at least 60 minutes before the readings were read. The reference and the reading values are averages of at least ten independent observations.

Table 3. As found results, humidity

Temperature [°C]	Reference [%rh]	Reading [%rh]	Correction [%rh]	Uncertainty [%rh]	Specification [%rh]	Conformity Statement
23,1	14,9	15,1	-0,2	0,4	1,5	PASS
23,1	33,0	33,4	-0,4	0,7	1,5	PASS
23,1	54,1	54,4	-0,3	0,9	1,5	PASS
23,1	75,0	75,0	0,0	1,0	1,5	PASS
23,1	95,2	95,9	-0,7	1,1	2,5	PASS

The correction shall be added algebraically to the reading.

Table 4. As left results, humidity

Temperature [°C]	Reference [%rh]	Reading [%rh]	Correction [%rh]	Uncertainty [%rh]	Specification [%rh]	Conformity Statement
23,1	14,9	15,0	-0,1	0,4	1,5	PASS
23,1	33,0	33,3	-0,3	0,7	1,5	PASS
23,1	54,1	54,3	-0,2	0,9	1,5	PASS
23,1	75,0	74,9	0,1	1,0	1,5	PASS
23,1	95,2	95,8	-0,6	1,1	2,5	PASS

The correction shall be added algebraically to the reading.

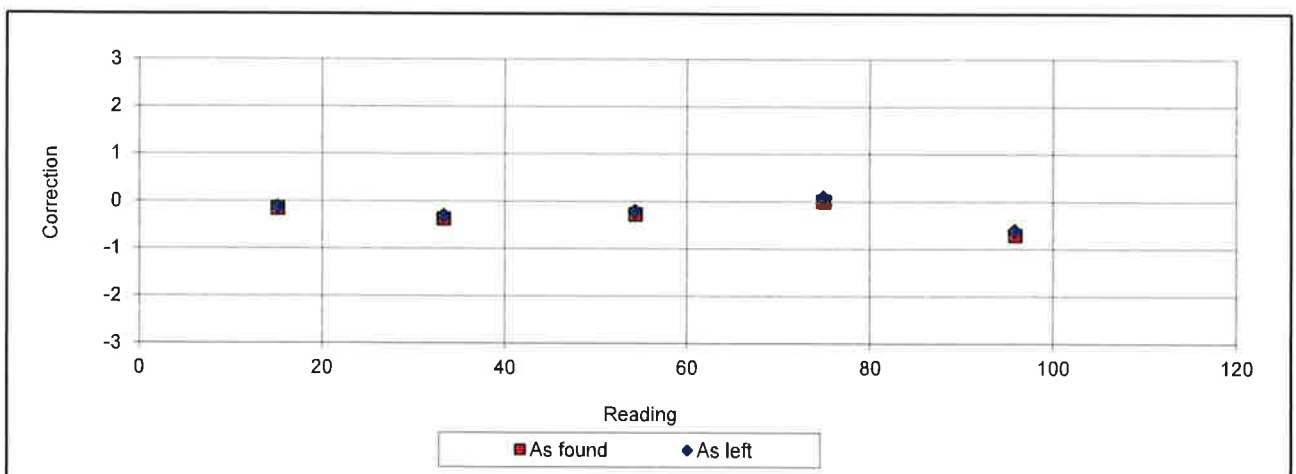


Figure 2. Final results, humidity [%rh]